Electric Golf Trolley
User Manual

WARNING: PLEASE FOLLOW ALL ASSEMBLY INSTRUCTIONS AND READ AND UNDERST AND THE OPERATING INSTRUCTIONS BEFORE YOU OPERATE THE CADDY

1. Packing List

Standard Parts

- 1 x Caddy Frame
- 2 x Rear Wheels
- 1 x Battery Pack (Battery, Bag, Leads)
- 1 x Charger
- 1 x Tool kit

Optional Accessories

- Cup Holder
- Umbrella Holder
- Seat and Seat Holder
- Carrying Bag
- Air Tires
- Rain Cover
- Score Card Holder

2. Glossary

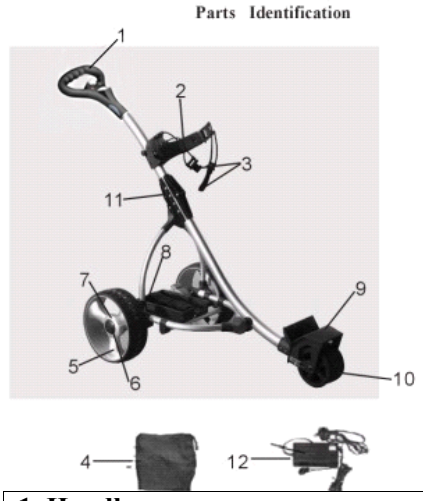

1. Handle	**7. Wheel Rubber**
2. Upper holder	**8. Battery Tray**
3. Upper holder belt	**9. Lower Holder**
4. Battery	**10. Front Wheel**
5. Rear wheel	**11. Fold part**
6. Wheel Cap	**12. Charger**

3. Assembly Instructions

4. Place battery pack on battery tray and fasten Velcro strap around battery and fasten tightly. Insert battery plug into caddy outlet.

4. Handle Function

1. Power Vol.

H (High power) : Green Color
M (Mid power) : Yellow Color .
L (Low power): Red Color

2. New Timer Function (Distance function)

When you press 10M , the trolley will run 10 meters and stop by itself .
When you press 20M , the trolley will run 20 meters and stop by itself .
When you press 30M, the trolley will run 30 meters and stop by itself .

3. New Cruise and Brake Function:

: Easy scrolling action lets you choose your preferred speeds to suit your pace perfectly;
The one press stop/start (power brake) function means your cart will always proceed at the speed you've selected. Select the speed to match your pace. The cart will remember its last setting when you stop, and travel at that speed automatically when you start again, except when you change the speed knob position.

:ON/OFF button controls the caddy's power supply. Press for 2-5 seconds in order to switch the caddy ON or OFF (similar to a mobile phone operation) . After you have connected your battery, you need to press ON, and the battery LED will illuminate. Now your caddy is ready for operation

4. Speed controller

Scrolling of the speed button lets you choose your preferred speed to suit your space perfectly, and the display will show the preferred speed. The speed level is from 1 to 5 (1 to 7 on some models)

5. Operating Instructions

5.1. Operating your trolley

In order to turn the trolley on push the On/Off switch to On. The battery charge LED should light up.

While holding on to the handle start dialing the speed control with your index finger slowly forward or clockwise. The trolley will start moving forward. Adjust the speed seamlessly to the desired pace.

To stop or slow the trolley down either dial the speed control knob backwards or use the cruise control or On/Off buttons as described previously.

5.2. Battery Use and Care

PLEASE OBEY THESE PRECAUTIONS FOR BATTERY USE & CHARGING

- Please do not charge the battery in a sealed container or in upside down position. It is recommended to charge the battery in a well ventilated area.
- Please do not charge the battery near a heater, or where heat accumulation may occur or in direct sunshine.
- In order to prolong the service life of the battery, please avoid complete discharge and charge the battery after every use. When the trolley is not in use for an extended period of time, it is recommended to charge the battery once a month.
- The battery's poles red color stands for positive, and the black for negative. In case of battery replacement please reconnect the poles of the battery correctly. Otherwise your caddy could suffer severe damage.
- Please do not disassemble the battery or throw it into a fire**. EXPLOSION!!!**
- **NEVER TOUCH THE ELECTRIC POLES OF THE BATTERY!! SAFETY HAZARD!!**

6. How to Charge the Battery:

Charge the battery by plugging the charger into the battery and then plug the charger into the main electricity supply. Charge the battery after each round of golf. Charging is complete when charger light (See type of charger) changes color. Battery charging takes anywhere between 5 - 12 hours.

Once the battery is charged there is no need to leave it plugged into the charger .There are two types of battery chargers. The changes in LED in colors for these different chargers are as follows:

1) The LED turns green when connecting the battery and changes to red once connected to an outlet indicating that the battery is being charged. The LED will revert to green once the battery is fully charged.

2) The LED light starts as steady green. If the battery requires charge and while charging the LEDs will revert to flashing green. When the battery is fully charged, the LED will stop flashing and revert to steady green.

7. General Maintenance

The steps below will ensure that you get a prolonged and reliable life out of your trolley.

- The trolley has been designed so that the user can concentrate on playing golf, while the trolley does the work of carrying your bag. In order to keep your trolley looking at its best, we advise that you wipe any mud or grass from the frame, wheels and chassis after every round with a damp cloth or paper towel.
- Do NOT use any high-pressure jet washers to prevent moisture entering the electronic systems, motors or gear boxes of the caddy.

- Remove the rear wheels every few weeks and remove any debris that might cause the wheels to drag. You might also apply some lubricant, such WD-40 to keep moving parts smooth.
- A four - five hour round of golf played once a week for 12 months is equivalent to ca. four years use of a lawnmower, so please inspect your cart at least once a year thoroughly, and if you notice any symptoms of wear, contact your trolley Service Center. Alternatively, you can have your trolley inspected and tuned by our Service Center, so it's always in great shape for the new season.
- Always disconnect the battery when you store the trolley, and always put your trolley together before re-connecting the battery. If you are not planning to play for at least a month, store the battery in a warm and dry place (not on concrete floor).

All of these recommendations will help keep your trolley in top condition and ensure that it remains your reliable partner, both on and off the links.

8. Trouble Shooting Guide

Symptom	**Resolutions**
Trolley does not have power	• check fuse in the battery case • check all wiring connections and plugs • check battery charge • Check if wheels & clutches are in order
Motor is running but wheels don't turn	• Check if wheels are secured to axle by split pin • Check right and left wheel position
Trolley pulls to left or right	• Check if wheel is fitted over the clutch and latched to axle • Check if clutch pin is visible at both sides of the axle • Check clutch turn freely in one direction only
Battery lacks power	• Check cable connections • Check if fuse is 30A • Check charger function
Problems attaching wheels	• Remove outer cap and adjust quick release catch